



Diesel Fired Heaters Instructions

Safety First:

Please ensure these instructions are available to anyone using this piece of equipment.

If this machine is used at a commercial worksite give these instructions to the site supervisor so that the information is readily available to all users.



Transportation:

- Machine must be transported in its normal upright condition
- Machine must be well secured to avoid movement. Failure to do this will result in damage to the internal workings of the unit meaning the machine may not function correctly or at all.

Before Using:

- Ensure machine has been electrically tagged and is up to date
- Check fuel tank to ensure adequate diesel
- Ensure adequate ventilation
- Keep machine away from any flammable items

Start Up Procedure:

- Plug machine into power supply
- Turn machine on – a humming noise will be heard for a few seconds before the machine ignites

When Operating:

- Keep machine away from any flammable items or explosives
- Ensure no dust/wood shavings etc can be stirred up by the hot air produced
- Machine to be used on the ground only
- Ensure there is adequate ventilation at all times the unit is in use
- Do not touch the machine as parts of it get very hot
- Ensure other people and animals do not get too close to the unit
- Never attempt to re-fuel the machine while it is running

Stopping Procedure/Cleaning Machine:

- Switch machine off
- Leave machine to cool down before handling or transporting
- Ensure others know that the machine is still potentially hot to touch
- Return unit with tank full (diesel)



DISCLAIMER

The manufacturers or supplier will not accept liability for injury or damage resulting from product failure due to misuses, abuse, alteration, lack of reasonable care, lack of adequate training, use not listed under these instructions or any other failure not related to defects in materials or manufacture.